


WIRING DIAGRAM

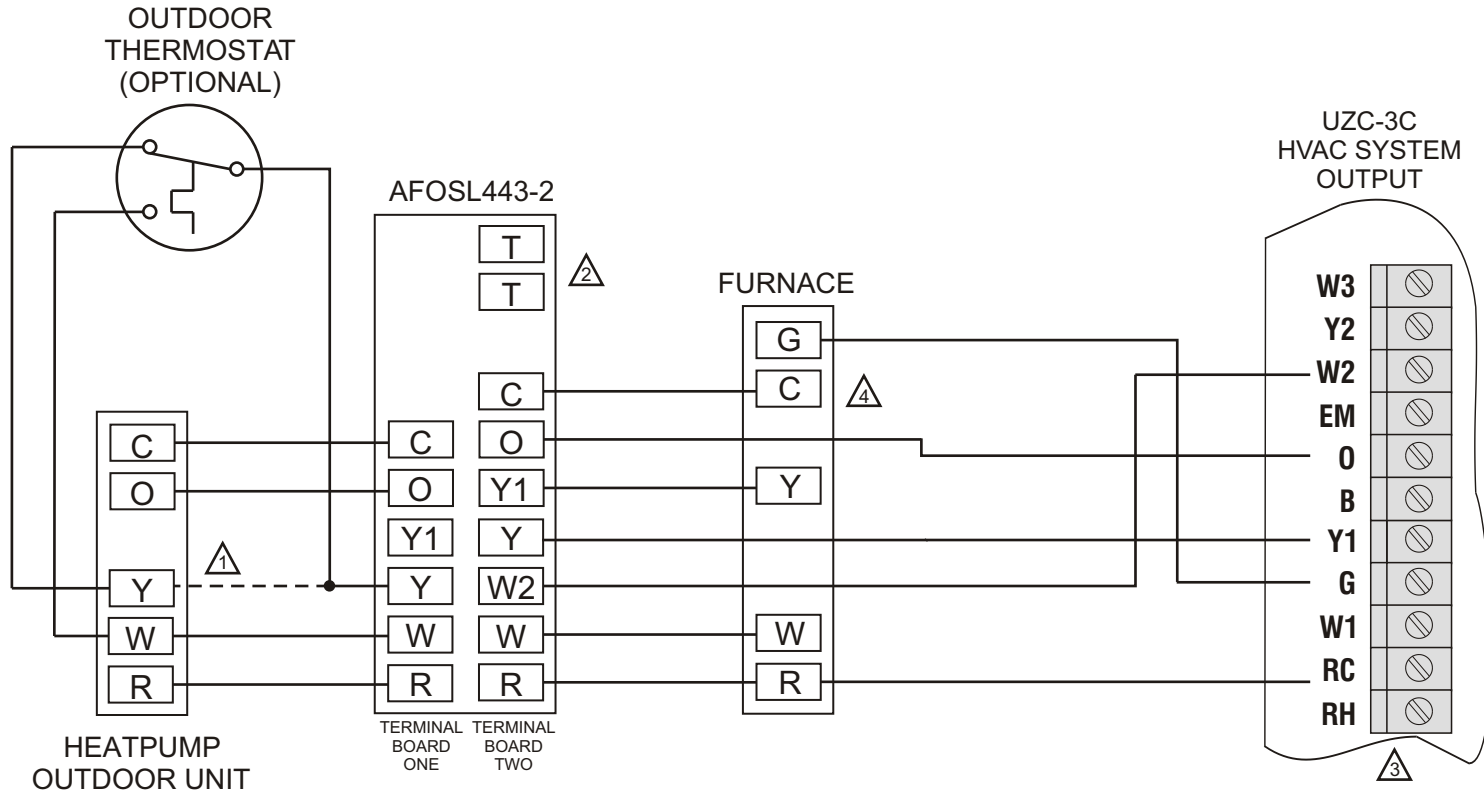

- 1 IF OUTDOOR THERMOSTAT IS NOT USED, FIELD WIRE DIRECTLY FROM 'Y' TERMINAL ON OUTDOOR HEATPUMP TO 'Y' TERMINAL ON TERMINAL BOARD ONE
- 2 USE 'T' & 'T' CONNECTIONS FOR OIL BURNERS REQUIRING ISOLATED CONTACTS
- 3 NO JUMPER REQUIRED IF RC/RH LINK IS NOT CUT
- 4 DO NOT CONNECT 'C' TO UZC3C

 EWC [®] CONTROLS INC. Englishtown, NJ 07726	DRAWING BY: DJH		DWG NAME: MODEL UZC-3C DUAL FUEL W/ AFOSL443-2 DUAL FUEL KIT		DATE: 06/24/04
	SIZE: A	REV: A	DWG NO: 090512A0030		
	SHEET: 1 OF 1		COPYRIGHT © EWC CONTROLS INC. ALL RIGHTS RESERVED		

DISCLAIMER: EWC Controls Inc., Cannot be held liable for the use or misuse of this supplied information. It is the responsibility of the user to determine the suitability of the application. Malfunctions, improper operation, and/or subsequent damage to any related equipment or property damage as a result of using this supplied information is the responsibility of the user. EWC Controls Inc., is not responsible for any misapplications including, but not limited to negligence, defect in products(s), system incompatibility, poor workmanship and/or installation.