

To protect this product in shipping, the large diameter damper is manufactured in the default “**closed**” position, which is compatible with Fresh Air and Make-up Air applications.

Before you install this damper, please confirm the desired “default” position of the damper blade.
“Closed or Open”...

- If you need the damper to default Closed, it is already set for that mode. You can install the damper immediately.
- If you need the damper to default Open, you must reverse the blade to the default “Open” position:
 - Loosen the 5/16” nuts on the V bolt.
 - Rotate the shaft 90 degrees so the blade is Open.
 - Re-tighten the 5/16” nuts on the V bolt.
- The damper is now compatible with Zone Control, Supply air and Return Air applications.
- You can now install the damper.

Register your warranty at <https://ewcccontrols.com/warranty/>