


WIRING DIAGRAM

SINGLE STAGE HEATPUMP W/ 1 OR 2 STAGE FURNACE

UZC-3C
HVAC SYSTEM
OUTPUT

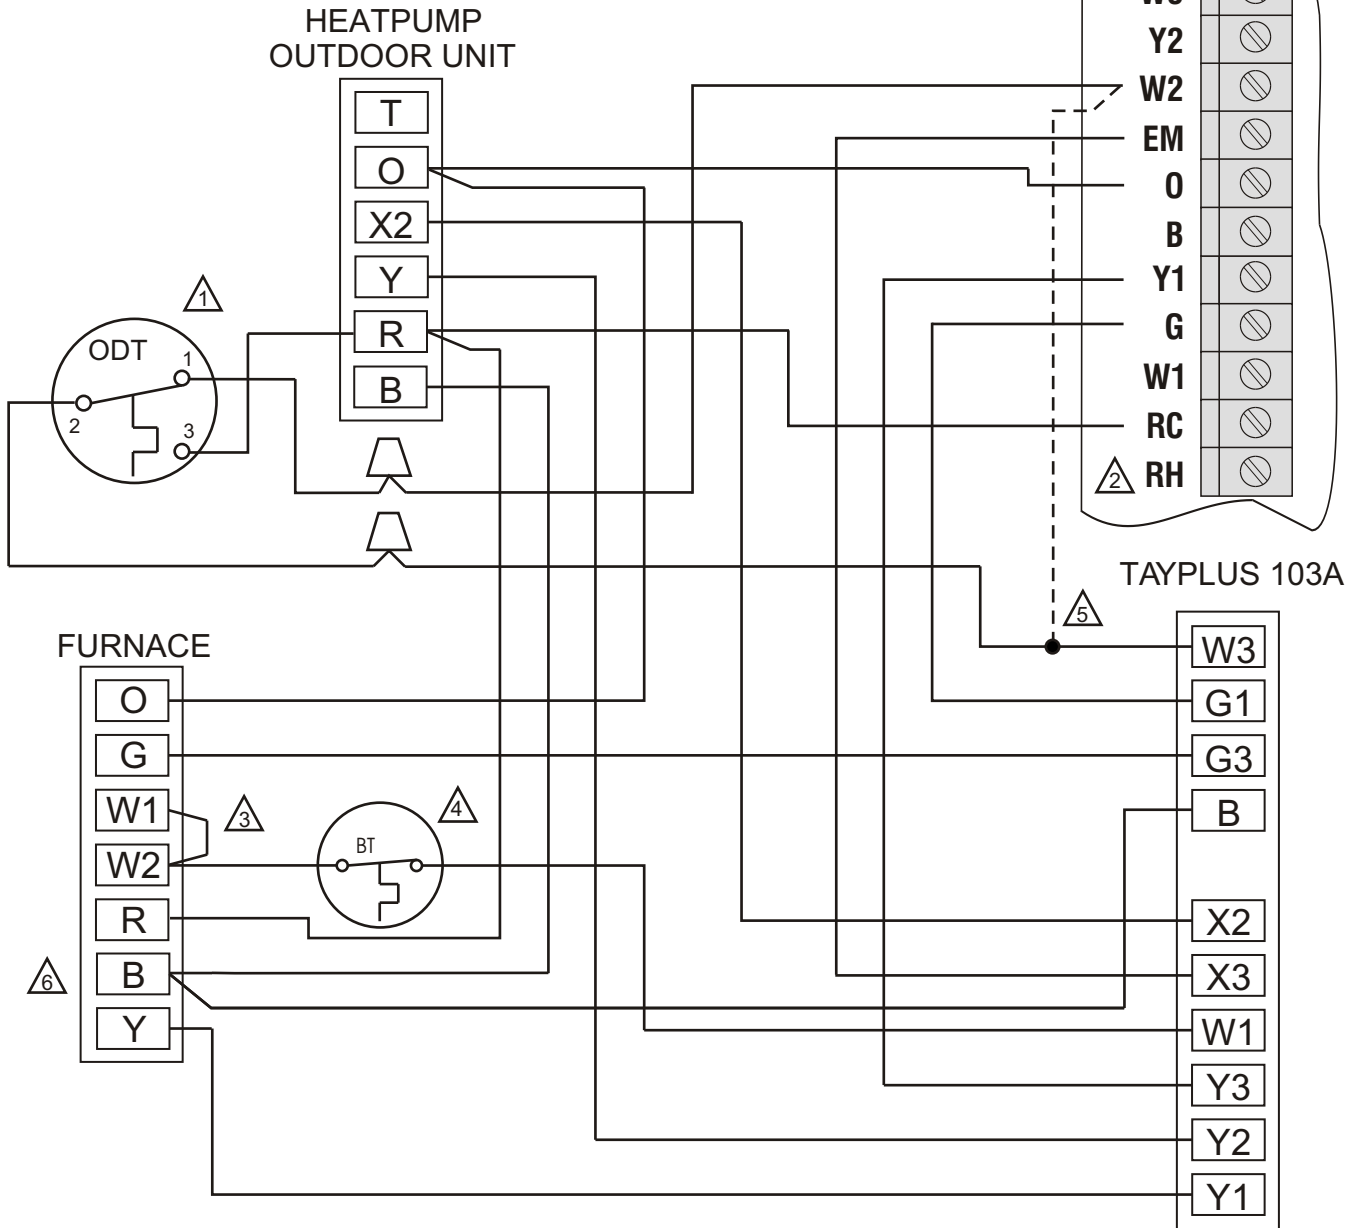

- ⚠️ 1 TO LOCK OUT GAS FURNACE AT OUTDOOR TEMPERATURES ABOVE ODT SET POINT
DO NOT CONNECT WIRE TO PANEL TERMINAL 'W2' AND TERMINAL '1' ON ODT
- ⚠️ 2 NO JUMPER REQUIRED IF RC/RH LINK IS NOT CUT
- ⚠️ 3 THIS JUMPER REQUIRED ONLY FOR 2 STAGE FURNACE APPLICATIONS
- ⚠️ 4 BONNET THERMOSTAT MODEL TAYPLUS101A REQUIRED FOR OIL FURNACE APPLICATIONS
- ⚠️ 5 WIRE ONLY IF ODT IS NOT USED
- ⚠️ 6 DO NOT CONNECT 'B' TO UZC-3C

 EWC [®] CONTROLS INC. Englishtown, NJ 07726	DWN ENG: DJH		DWG NAME: UZC-3C DUAL FUEL W/ TAYPLUS 103A -- RESTRICTED	
	SIZE: A	DATE: 05/03/04	DWG NO: 090512A0025	REV: E
	SCALE: NOT TO SCALE	COPYRIGHT © EWC CONTROLS INC. ALL RIGHTS RESERVED		SHEET: 1 OF 1