
## **WIRING DIAGRAM**

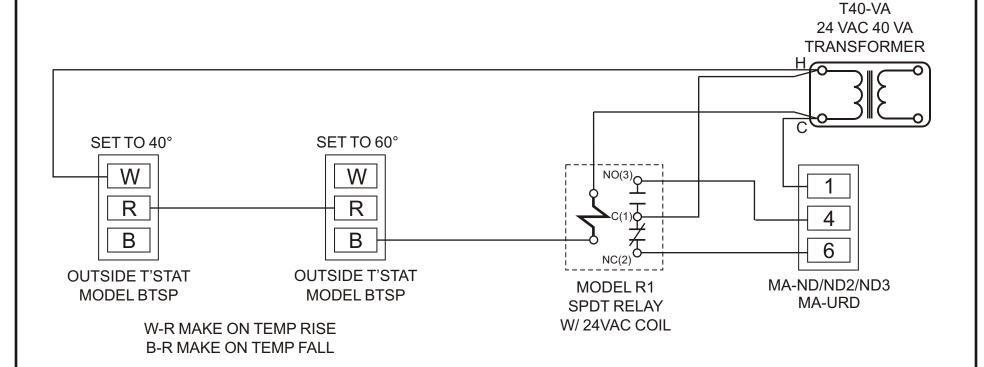

\*DAMPER WILL OPEN TO BRING IN FRESH AIR WHEN OUTSIDE TEMPERATURE IS BETWEEN 40° AND 60°

