
WIRING DIAGRAM

MANUAL OPERATION OF SPRING TYPE DAMPER ACTUATOR FOR USE WITH POWER OPEN DAMPER

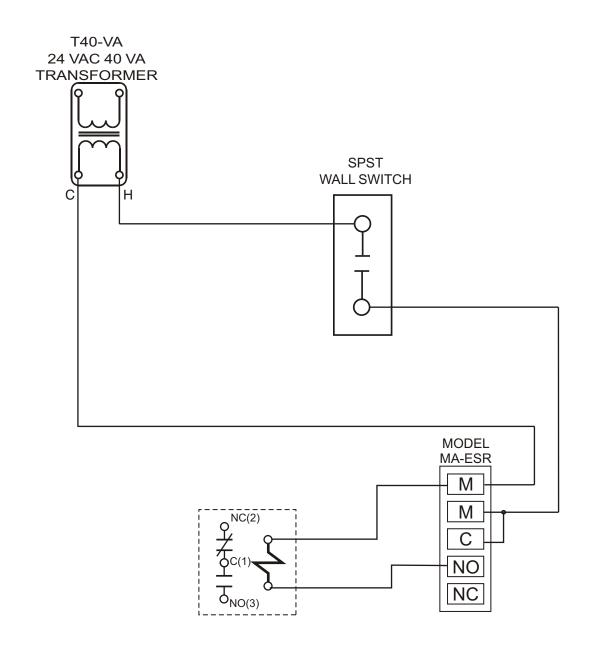



DRAWING BY:
DJH

DWG NAME:
WODEL MA-ESR POWER OPEN
W/ SPST WALL SWITCH

SIZE:
REV:
A B

DWG NO:
DISCLAIMER: EWC Controls Inc., Cannothis supplied information. It is the responsibility of the application. Malfunctions, walfunctions, and the supplication of the supplication. Malfunctions, walfunctions, and the supplication of the supplication. Malfunctions, and the supplication of the supplication. Malfunctions, and the supplication of the supplication of the supplication.

COPYRIGHT © EWC CONTROLS INC. ALL RIGHTS RESERVED

1 OF 1

DISCLAIMER: EWC Controls Inc., Cannot be held liable for the use or misuse of this supplied information. It is the responsibility of the user to determine the suitability of the application. Malfunctions, improper operation, and/or subsequent damage to any related equipment or property damage as a result of using this supplied information is the responsibility of the user. EWC Controls Inc., is not responsible for any misapplications including, but not limited to negligence, defect in products(s), system incompatibility, poor workmanship and/or installation.

04/19/04