

# ATTENTION

MAKE SURE **ZONING MODE** IS ACTIVE BEFORE YOU START EQUIPMENT TEST (E11)

+How to Activate Zoning Mode on the UT-3000

1. Press and hold both the UP and DOWN buttons located under the UT3000 LCD simultaneously, then release.
2. The screen will display:  
**Select SYS Menu**
3. Press the DOWN button until you see either:  
**MENU HEAT PUMP** (for heat pump systems)  
or **MENU AIR COND** (for A/C-only systems)
4. Press the RIGHT button to enter the selected menu.
5. Wait for the message **Wait for System** to disappear.
6. Press the DOWN button until you see:  
**CL SETUP**
7. Wait for the message **Wait for System** to disappear.
8. Press the RIGHT button to enter the selected menu.
9. Press DOWN repeatedly until you see:  
**ZONING MD** (Zoning Mode)
10. Press the RIGHT button to select **ZONING MD**.
11. The LCD will show:  
**\*OFF**
12. Press DOWN once to change it to:  
**\*ON**
13. Press RIGHT to confirm and activate **Zoning Mode**.
14. The display will show:  
Updating System, then confirm with **\*ON**

---

**Zoning Mode** is now successfully activated proceed to Equipment Test (E11) and commissioning steps.