


### WIRING DIAGRAM FOR SPRING CLOSE / POWER OPEN

ANY HEAT/COOL THERMOSTAT WITH SUB-BASE

### RECOMMENDED CONFIGURATION

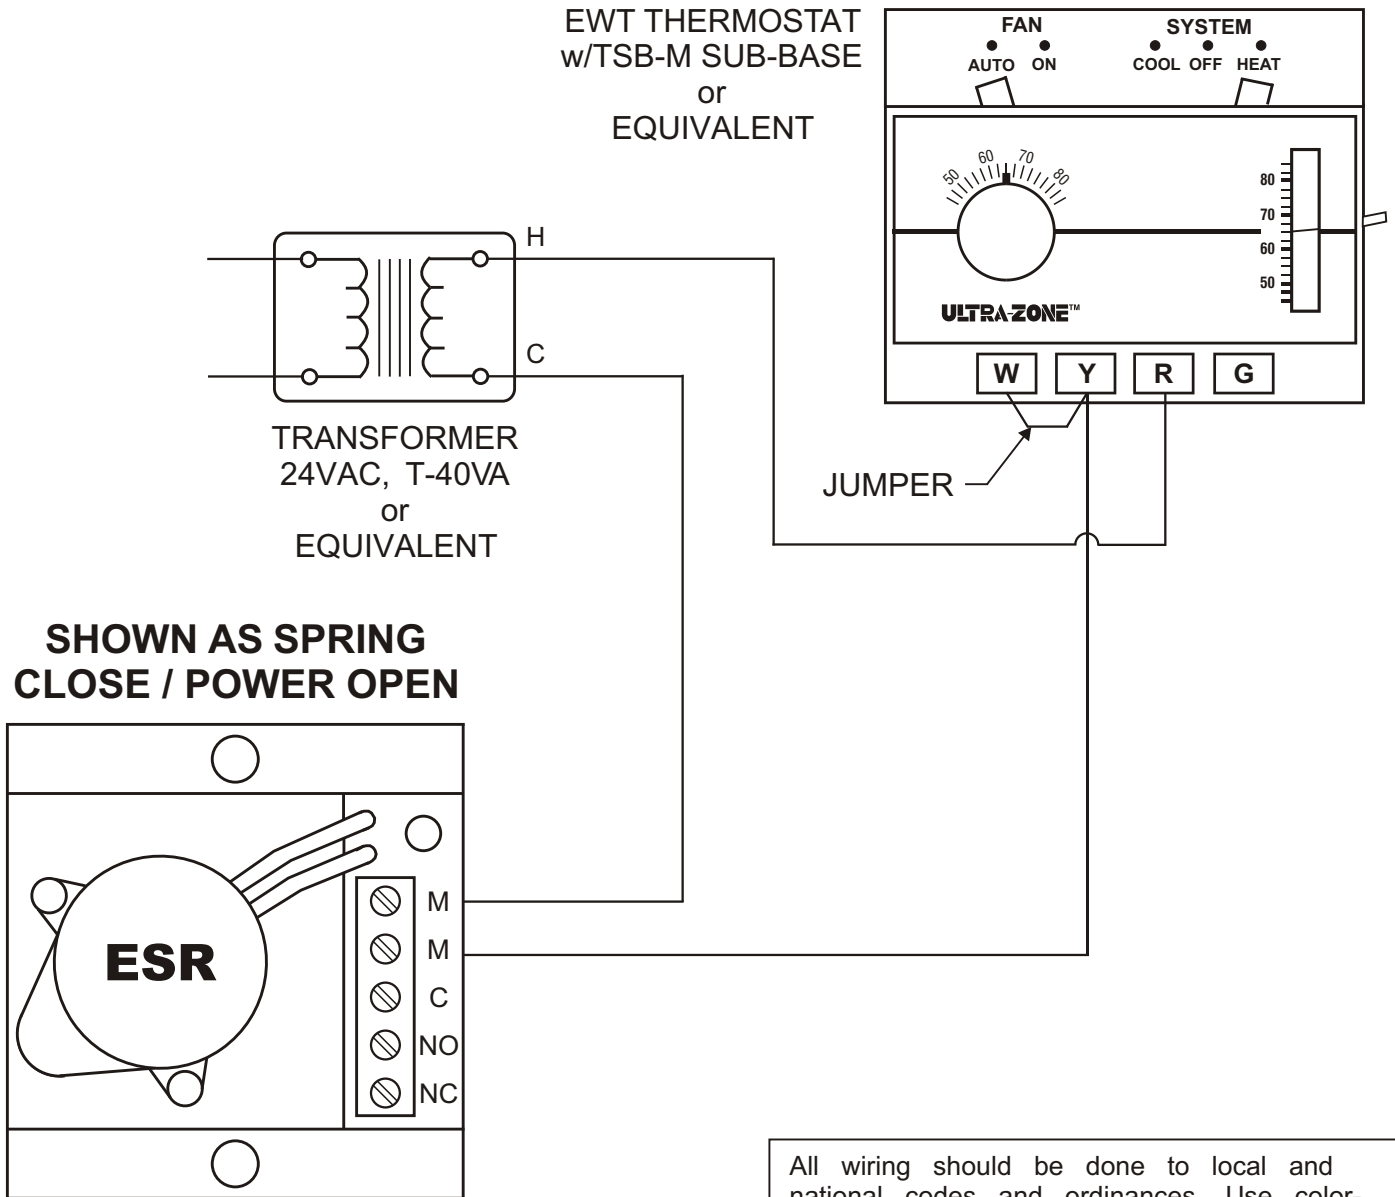

All wiring should be done to local and national codes and ordinances. Use color-coded multi-conductor wire. 18 AWG solid copper wire.